


QUICK START GUIDE:

Setting up your WiFi and App





- 1 Connect to your NextLight WiFi router on your device.** Using your device's WiFi settings, connect to your network with the default SSID (network name) and WPA Key (password) shown on your router. Ensure you're connected before moving on to step two.



- 2 Download the NextLight app.** Search for "NextLight WiFi App" in the Apple App Store or Google Play Store and then install it on your mobile device.



- 3 Select "Sign Up" towards the bottom of the screen**
- 4 Create an account.** This account is separate from your NextLight billing account.

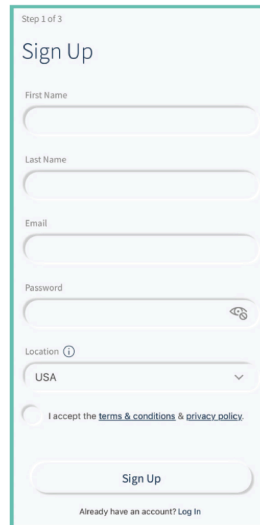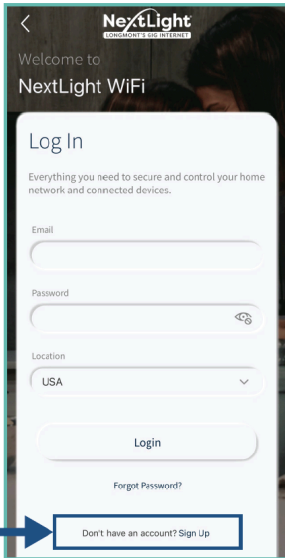

Note:

Please wait at least 10 minutes after your GigaSpire had been 'turned up' before attempting step 4.

Need help?


Call our technical support at 303-774-4494 and choose option 2.

See the *NextLight WiFi App Consumer Product Guide* for instructions on using specific features.



- 5 Tap the QR code that appears within the app. (You will be asked to allow the app to access your camera.)

Point your camera at the QR Code found on the bottom of your GigSpire Router, or on the sticker that came in your box (example shown below). This will auto populate your router information into the app.

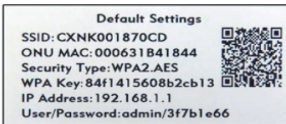


- 6 Select OK.

- 7 **Customize Your Network.** Name your network and create a new password. The Router Name will be used throughout the app.

The Network Name (SSID) is what you will use as your wireless connection name.

Select a password for your wireless network. If you do not want to change it on all the devices in your home, use your existing wireless SSID and Password from your current router.

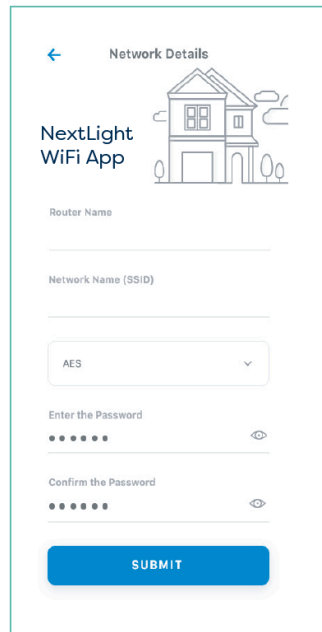

- 8 Click SUBMIT and you are done!


GUÍA DE INICIO RÁPIDO

Configuración de su WiFi y Aplicación



1 Conéctate al enrutador WiFi NextLight desde tu dispositivo.


Usando la configuración WiFi de su dispositivo, conéctate a tu red con el SSID (nombre de red) y la clave WPA (contraseña) predeterminados que se muestran en su enrutador. Asegúrese de estar conectado antes de continuar con el paso dos.




2 Descarga la aplicación NextLight. Busca "NextLight WiFi App" en Apple App Store o Google Play Store y luego instálala en tu dispositivo móvil.



3 Seleccione "SIGN UP" en la parte inferior de la pantalla.

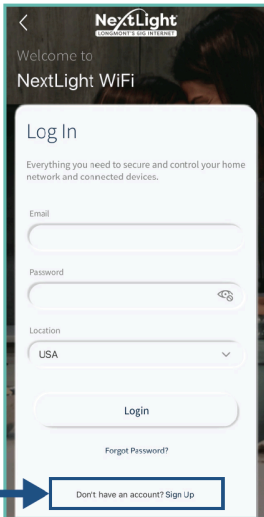

4 Crea una cuenta. Esta cuenta es independiente de tu cuenta de facturación NextLight.

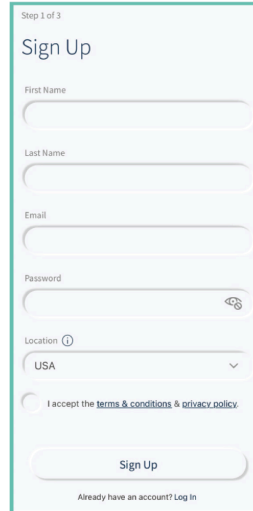

Nota: Por favor, espera al menos 10 minutos después de que tu GigaSpire haya sido "encendido" antes de intentar el paso cuatro.


¿Necesita ayuda?

Llame a soporte técnico al 303-774-4494 y presione la opción 2.

Consulte la guía del NextLight WiFi App Consumer Product Guide para obtener instrucciones sobre el uso de funciones específicas.

- 5 Toca el código QR que aparece en la aplicación. (Te pedirá que permitas que la aplicación acceda a tu cámara).

Apunta la cámara al código QR que se encuentra en la parte inferior del enrutador GigSpire o en la calcomanía que viene en la caja. La información del enrutador se introducirá automáticamente en la aplicación.

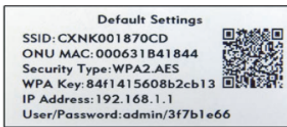


- 6 Selecciona OK.

- 7 **Personaliza tu red.** Dale un nombre a tu red y crea una nueva contraseña. El nombre del enrutador se utilizará en toda la aplicación.

El nombre de la red (SSID) es lo que utilizarás como nombre de tu conexión inalámbrica.

Selecciona una contraseña para tu red. Si no deseas cambiarla en todos los dispositivos, utiliza el SSID y la contraseña existente de su enrutador actual.

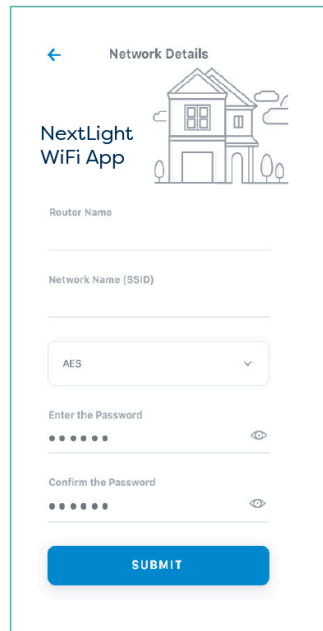

- 8 ¡Haz clic en 'SUBMIT' y ya está!