


NEXTLIGHT STARTER GUIDE





716GE-I Optical Network Terminal (ONT)


1. Locate the **white NextLight wall plate** and carefully lift the hatch from the bottom to expose the fiber port connections. Locate the nearest power outlet to the wall plate.

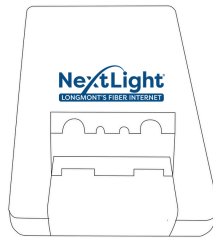



2. Remove the ONT hood cover using a **Phillips-head screwdriver** and carefully remove the cap found on the fiber port of your ONT.

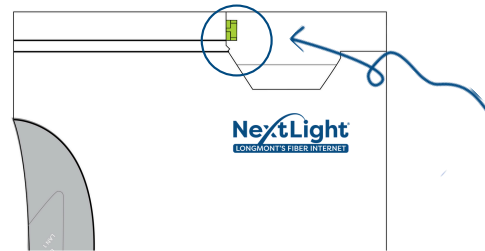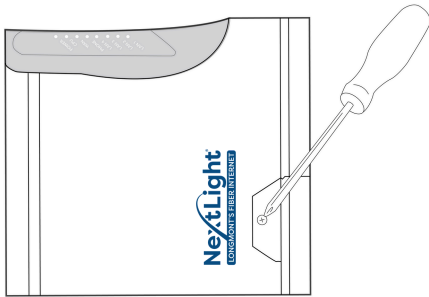


3. Carefully remove the plugs found on the ends of the yellow-and-green fiber cable, ensuring not to touch the end of the cable once the plugs have been removed.

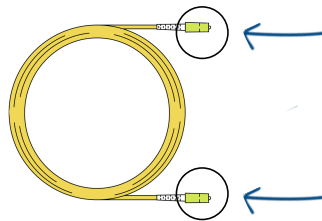


4. Making sure the notch on the fiber cable is aligned with the slot on the fiber port, plug the yellow-and-green fiber cable into the fiber port on the ONT and reattach the cover.

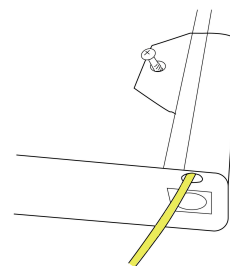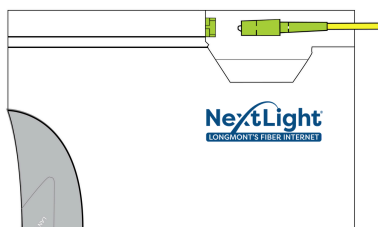


5. Plug the other end of the yellow-and-green fiber cable already attached to your ONT into the white NextLight wall plate; making sure the notch on the yellow-and-green fiber cable is aligned with the slot on the NextLight wall plate.

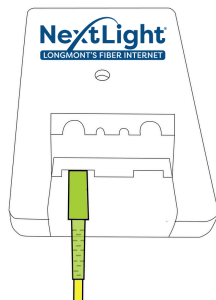


6. Plug the power cord into the ONT, making sure all pins are straight and aligned correctly with the power cord port. Then plug the power cord into the nearest available outlet.

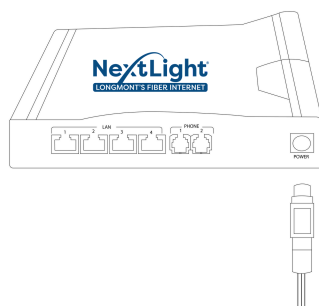

7. Connect a Cat 5E or Cat 6 ethernet cord in port 1 of your ONT.

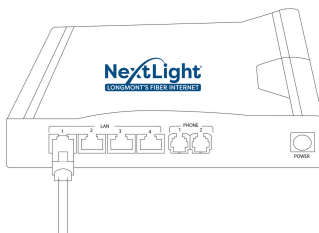

8. Connect the other end of the Ethernet cord in the Internet/WAN port of your router. About 5 minutes after powering the unit on, the Power, CPU, and WAN lights should be lit orange.

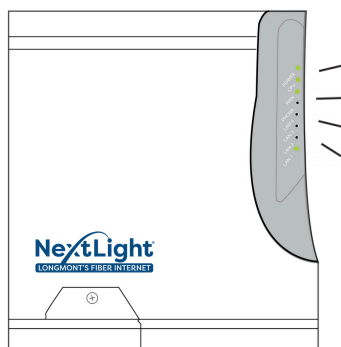


GUÍA DE INICIO NEXTLIGHT





Terminal de Red Óptica (ONT) 716GE-I


1. Localice la placa blanca de NextLight en la pared y levante con cuidado la parte de abajo para exponer las conexiones de fibra. Busque el enchufe más cercano a la placa de pared.

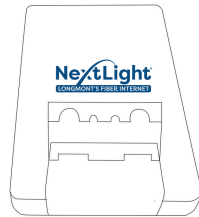



2. Quite la cubierta del ONT con un desarmador de cruz (Phillips) y quite con cuidado la tapa del puerto de fibra del ONT.

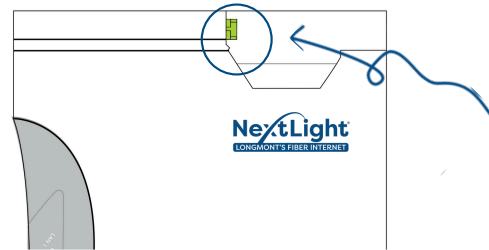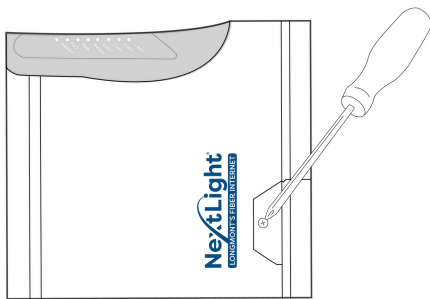


3. Quite con cuidado los tapones que se encuentran en las puntas del cable de fibra amarillo y verde, asegurándose de no tocar las puntas del cable después de que haya quitado los tapones.

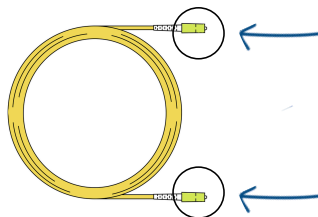


4. Alinee la muesca del cable de fibra con la ranura del puerto de fibra y conecte el cable amarillo y verde al puerto de fibra del ONT. Después, vuelva a colocar la cubierta.

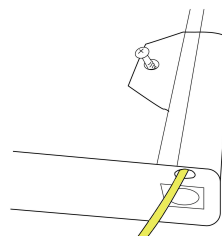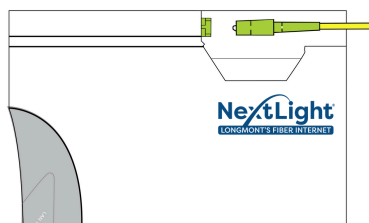


5. Conecte el otro extremo del cable de fibra amarillo y verde (ya conectado al ONT) a la placa blanca de pared de NextLight, asegurándose de que la muesca esté alineada con la ranura.

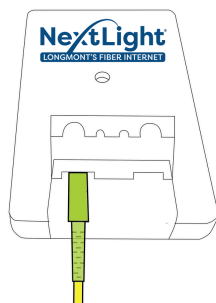

6. Conecte el cable de energía al ONT, verificando que los pines estén derechos y alineados correctamente con el puerto de energía. Luego, conéctelo al enchufe más cercano disponible.

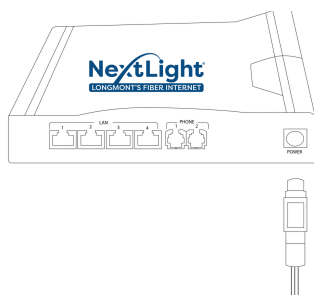

7. Conecte un cable Ethernet Cat 5E o Cat 6 al puerto 1 del ONT.

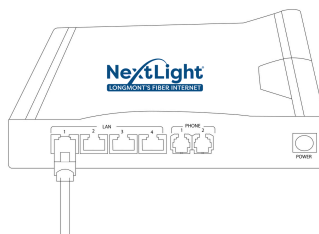

8. Conecte el otro extremo del cable Ethernet al puerto Internet/WAN de su router. Aproximadamente 5 minutos después de encender el equipo, las luces de Power, CPU y WAN deberán encenderse en color naranja.

