


NEXTLIGHT STARTER GUIDE



U4 Mesh WiFi Router Series & Optical Network Terminal (ONT)

Once the U6 Gateway (main) Router setup is complete proceed with the following process for each of the U4 Mesh Satellite Units:


1. Connect one end of the provided Ethernet cord into one of the LAN/Ethernet ports on the U6.

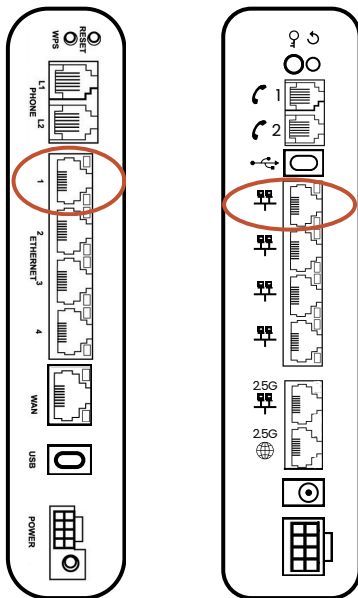


U6

U6.3


2. Connect the other end of the Ethernet cord into the port labeled WAN or marked with a "Globe" symbol on the back of the U4.

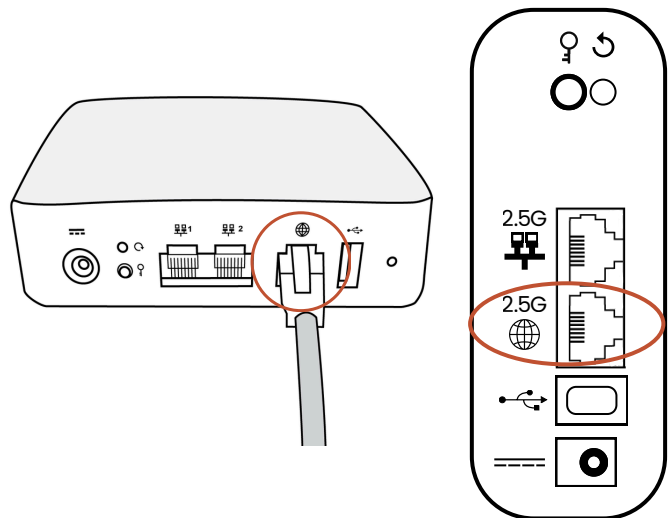


3. Connect the U4 power cable to the back of the U4 and the other end into an available power outlet.

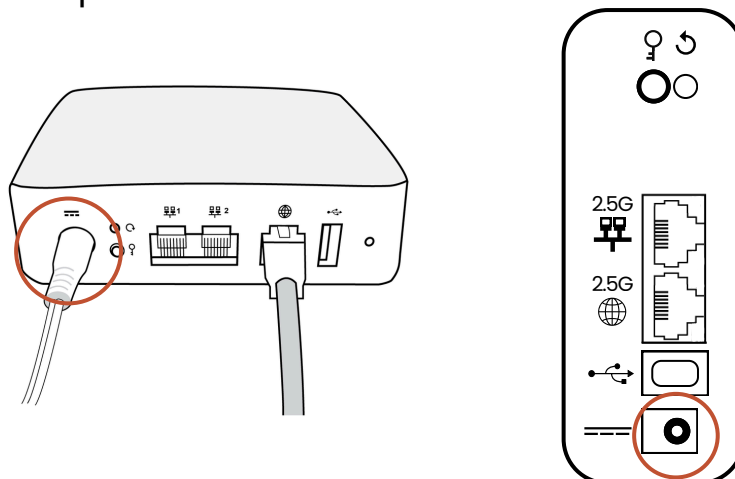

4. The devices will take about five to ten minutes to pair. Once pairing is successfully complete both systems will show a solid green indicator light on both devices.

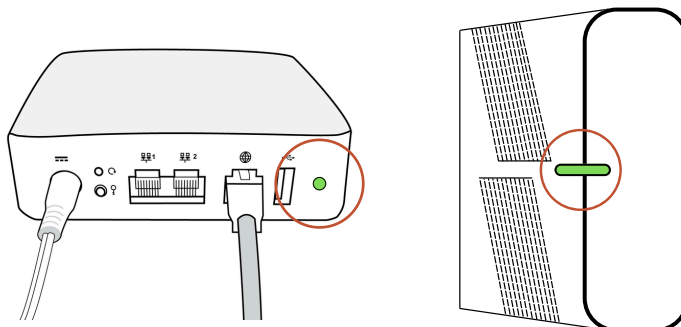

5. You may now disconnect the Ethernet cable from the U4 and U6 and move the U4 to its desired placement in the home.

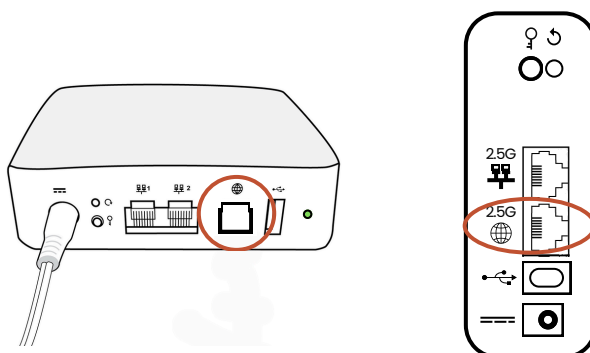

6. The NextLight WiFi App can help determine if placement is optimal. You can now install the Nextlight WiFi app from Google Play or Apple App Store. Ensure that your phone is also connected to WiFi.



Scan this QR code to watch a video tutorial on how to install your new equipment.

Or visit: mynextlight.com/wifi6-support/



Need help? Call our technical support at 303-774-4494 and choose option 2.


GUÍA DE INICIO NEXTLIGHT




Serie de Router WiFi Mesh U4 y Terminal de Red Óptica (ONT)

Una vez que la configuración del router principal U6 esté completa, siga estos pasos para cada unidad satélite U4 Mesh:

1. Conecte un extremo del cable Ethernet incluido a uno de los puertos Ethernet del U6.


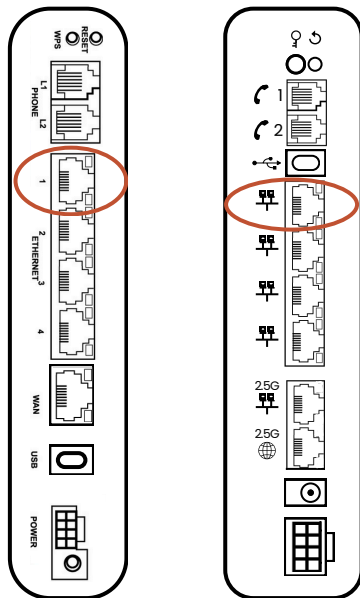


U6


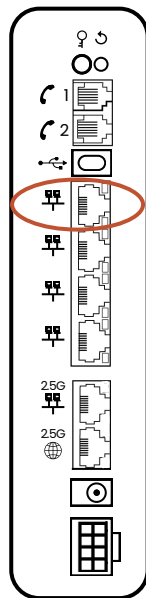


U6.3


2. Conecte el otro extremo del cable Ethernet al puerto marcado como WAN o con el símbolo de un globo en la parte trasera del U4.

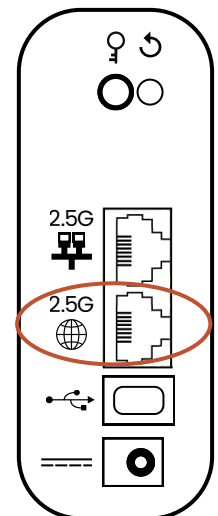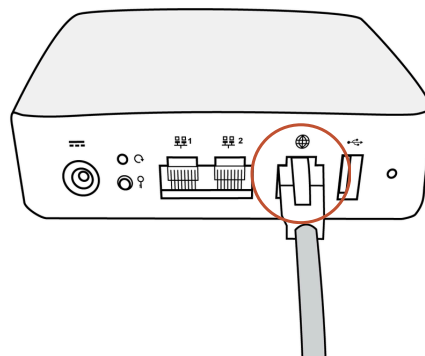


3. Conecte el cable de energía al U4 y luego enchúfelo al enchufe mas cercano.

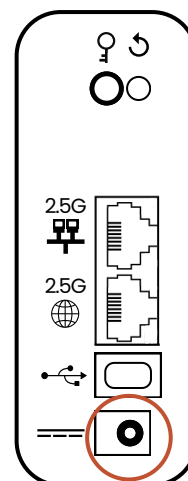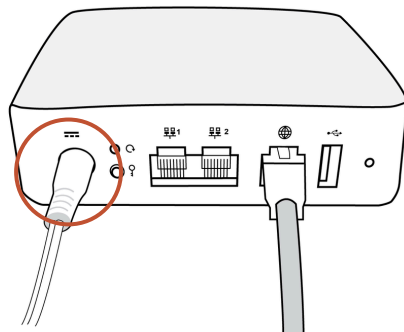

4. Los equipos tardarán entre 5 y 10 minutos en sincronizarse. Cuando el proceso termine, ambos dispositivos mostrarán una luz verde fija.

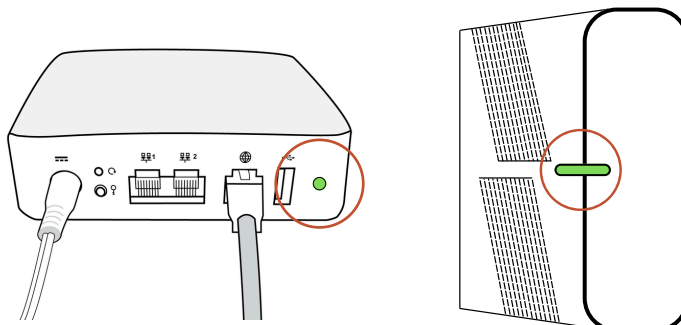

5. Ahora puede desconectar el cable Ethernet del U4 y del U6, y mover el U4 al lugar donde desee colocarlo en su hogar.

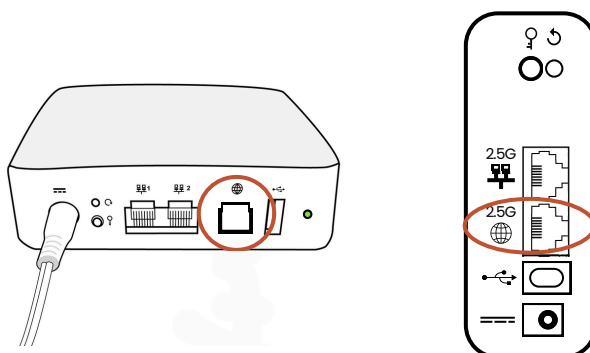

6. La aplicación de NextLight WiFi puede ayudarle a verificar si la ubicación es la ideal. Puede instalarla desde Google Play o la App Store de Apple. Asegúrese de que su teléfono también esté conectado a WiFi.



Escanee este código QR para ver un video tutorial sobre cómo instalar su nuevo equipo.

O visite: mynextlight.com/current-customers/self-install-guides/



¿Necesita asistencia? Llame a soporte técnico al 303-774-4494 y presione la opción 2.